

# DABIT-016

## Phenethylamine Test (2C's and 25x-NBOMe's)

[www.fieldforensics.com](http://www.fieldforensics.com)




1) Remove Sampler from clear tube.

2) Remove paper tab from **Sticky Sampler**  
**Tip. DO NOT TOUCH** sticky sampler tip.




3) **Dab** sticky Sampler Tip on the suspect material.  
**Dab firmly** to collect a sample of suspect material.

4) **Return Sampler** to Clear Inner Tube, Sampler tip first, and close.



5) Hold Sampler as shown. **Squeeze Clear Inner Tube AND Sampler Tube** to break ampoule.

6) Keeping the **Sampler Tip** pointed downward, look for a color change on the **Sampler Tip** and compare to the color chart below. Observe for 60 seconds; if no color then the test is negative.

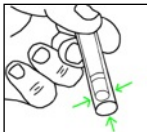


7) After recording results, carefully open clear tube and **SLOWLY** add five to six drops of the Neutralizer liquid (provided). Close cap on clear tube.

Possible Irritant:

Avoid contact of liquids with eyes and mucous membranes.

April 2017 Rev. 8

# FIELD FORENSICS INC.

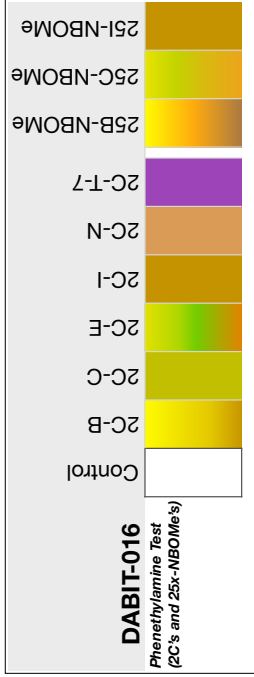

Full DABIT™ Color Chart Available at [www.fieldforensics.com](http://www.fieldforensics.com)